

LAND ROVER DEFENDER STEERING WHEEL FITTING INSTRUCTIONS

Please read all instructions before fitting.

We recommend you use a professional installer for the assembly and fitting of this product in order to achieve the best results.




STEP 1

Unpack the various steering wheel components illustrated below.



STEP 2

Unbolt the rear plate section as indicated.

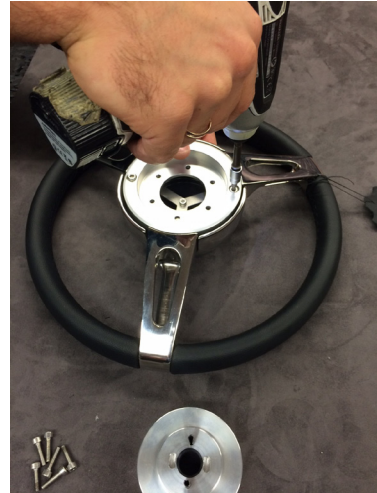

STEP 3

Remove the main steering wheel assembly from its front centre / face.



STEP 4

Turn over the main steering wheel assembly.



LAND ROVER DEFENDER STEERING WHEEL FITTING INSTRUCTIONS


Please read all instructions before fitting.

We recommend you use a professional installer for the assembly and fitting of this product in order to achieve the best results.

STEP 5


For Defender vehicles of model year 2014-on, the two pins in the centre boss should be removed.

For Defender vehicles of model year pre-2014, the two pins in the centre boss should be left in place.

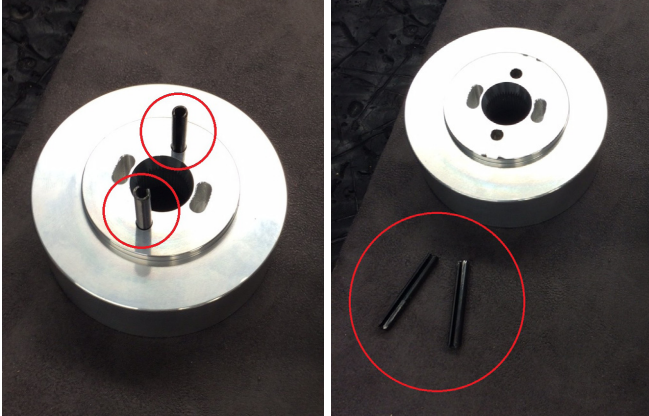

STEP 6

For all Defender vehicles, regardless of model year and whether pins remain in place, align the centre boss in the direction indicated.

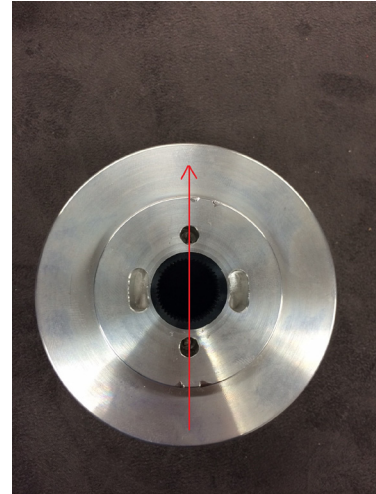

STEP 7

Align the main steering wheel assembly in the same way as the centre boss so that all bolt holes correspond.




STEP 8

Place the main steering wheel assembly over the centre boss. Insert and tighten bolts.



STEP 9

Take the front centre / face of the steering wheel and hold it so that the KAHN logo appears level and horizontal. Then turn it over and place face down. Overlay it with the main steering wheel assembly as shown. Insert and tighten bolts where indicated.

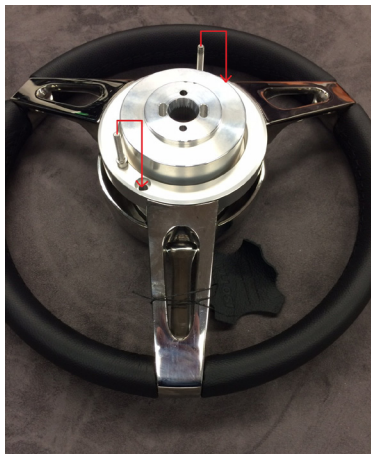

STEP 10

The steering wheel is now ready to be mounted to the vehicle.

